

IMPORTANT PRECAUTIONS FOR THE SAFE AND PROPER USE OF CONDENSATE EVAPORATOR PANS

To avoid the risk of fire:

Because it is an electrical appliance, the condensate evaporator pan must be connected to a GFI circuit breaker or GFI protected line of adequate capacity and the pan must be grounded. The pan must never be placed or allowed to remain on a wet surface.

Because it generates a large amount of heat, the condensate evaporator pan must never be placed on a wood surface or near flammable material. The pan and the area surrounding the pan must be cleaned regularly.

Do not allow the defrost water in the pan to exceed the pan's capacity
(See below)

TO MAXIMIZE THE SAFETY AND EFFICIENCY OF THE CONDENSATE EVAPORATOR PAN:

During each defrost cycle, a refrigerator will “dump” a quantity of defrost water. The dump must not exceed the capacity of the pan. The following table is a guide to be used in determining the proper condensate evaporator pan model based on the quantity of the dump and the amount of condensation that needs to be evaporated.

SUPCO NO.	CAPACITY	VOLTS	WATTS	AMPS	DIMENSIONS L x W X H	APPROXIMATE DISSIPATION RATE Per Day
CP801	1 3/4 QT	120	400	3.3	10 x 7 x 2 1/2	3 Gallon
CP802	2 1/2 QT	120	800	6.6	13 x 7 x 2 1/2	6 Gallon
CP804	4 1/2 QT	120	1000	8.34	13 x 7 x 4	10 Gallon
CP804HD	7 1/2 QT	120	1000	8.34	13 x 10 x 4	6 Gallon
CP807	7 1/2 QT	120	1000	8.34	13 x 10 x 4	10 Gallon
CP807-240	7 1/2 QT	240	1000	4.8	13 x 10 x 4	10 Gallon
CP815	15 QT	120	1440	12	21 x 13 x 4	12 Gallon
CP815 240	15 QT	240	1500	6.28	21 x 13 x 4	12 Gallon

The condensate pan must be installed in an adequately ventilated compartment such that moisture-laden air can dissipate easily. Clean the pan and check the float every thirty days.

The condensate pan is supplied with a three-prong grounded plug so that it can be easily removed from the compartment for cleaning.

WARRANTY:

Sealed Unit Parts Co., Inc. warrants this condensate pan and all parts thereof for one year from its installation from defects in material and workmanship under normal use, service and installation. Its obligation under the warranty is limited to repairing or replacing, at its option, the pan or portions thereof. This warranty does not apply to any pan or part thereof which has been subject to any accident, alteration, abuse, misuse, damage, or failure to follow the above installation or safety precautions. In no event, under any circumstances, shall Sealed Unit Parts Co., Inc. be liable for loss of use, revenue, profit, or for any other indirect, special, or consequential damages including, but not limited to, injury to person or property.

The above warranty is in lieu of all warranties, express or implied, and to all parties.