

LIMITED WARRANTY

Sealed Unit Parts Co., Inc. hereby warrants that it will repair or replace, at its option, any part of the Two Temperature Data Logger, which proves defective by reason of improper workmanship or material, free of charge for parts and labor, for a period of one year from the date of original purchase by the buyer. This warranty does not apply if, in the sole opinion of Sealed Unit Parts Co., Inc., the Two Temperature Data Logger has been intentionally damaged due to misuse, neglect, improper packing, shipping, modification or servicing by other than Sealed Unit Parts Co., Inc., or personnel authorized by Sealed Unit Parts Co., Inc. For information on how to obtain service under this warranty contact the dealer where your Two Temperature Data Logger was purchased, or Sealed Unit Parts Co., Inc. at the address printed below:

Sealed Unit Parts Co., Inc.
P.O. Box 21
2230 Landmark Place
Allenwood, NJ 08720 USA
Phone: (732) 223-6644
FAX: (732) 223-1617
www.supco.com

LIABILITY DISCLAIMER STATEMENT

Sealed Unit Parts Co., Inc. (hereafter known as Supco) makes no warranty, representation, or guarantee regarding the suitability of its products for any particular purpose, nor does Supco assume any liability arising out of the application or use of any product, and specifically disclaims any and all liability, including without limitation consequential or incidental damages.

Supco products are not designed, intended, or authorized for use as components in life support systems, or for any other application in which the failure of the Supco product could create a situation where personal injury or death or significant financial loss may occur.

Should any person or persons purchase or use Supco products for any such unintended or unauthorized application, that person or persons shall indemnify and hold Supco, and its officers, employees, affiliates, and distributors harmless against all claims, costs, damages, expenses, and reasonable attorney fees arising out of, directly or indirectly, any claim of personal injury, death or financial loss associated with such unintended or unauthorized use, even if such claim alleges that Supco was negligent regarding the design or manufacture of the product in question.

DLTT DATA LOGGER INSTRUCTIONS

The SUPCO DLTT Data Logger is a self-contained precision instrument for recording the temperature of two independent temperature probes. Each temperature sensor is enclosed with a 4-inch stainless steel jacket, which may be immersed in any solid or liquid that is compatible with 300 series stainless steel. Refer to the Product Specifications (page 9 of this manual) for the environmental limits of the temperature sensors. The DLTT series temperature probes are interchangeable and replacement probes are available. Each temperature sensor cable is 6 feet long. The DLTT can store up to 8000 dual temperature measurements for each recording. The recordings can be read using the supplied PC interface, the optional SUPCO Data Plotter or the DataStor.

The Windows™ compatible software allows the user to set the DLTT for a recording session, read the recorded data in text or graphical format, and to store the recorded data for future reference or analysis. Applications include monitoring of environmental areas, coolers, freezers, food or storage areas, laboratories, greenhouses, museums, etc. Refer to the following instructions for explanations of how to record and how to retrieve temperature recordings.

SOFTWARE INSTALLATION

The **Data Logger to PC** program is supplied on 3½" floppy disks. To install the software follow the instructions below:

1. Insert disk 1 of 2 into Drive A.
2. If you are using Window™95(98), click on **START**, click on **RUN**.
3. Type **A:SETUP** and press **Enter**.
4. If you are using Windows™3.11, click on **Program Manager**.
5. Select **FILE**, and select **RUN**.
6. Type **A:SETUP** and press **Enter**.

To get the latest product information and current release of the Data Logger to PC software visit the SUPCO website at www.supco.com


If you are not familiar with the above commands refer to the instructions that are supplied with your version of Windows™.

SETTING THE DATA LOGGER

The DLTT recording interval or sampling rate is the time between each set of temperature measurements that is saved in the logger's memory. This interval is set from the PC interface program (supplied), from the optional SUPCO Data Plotter or the DataStor. This sampling rate can be set from 5 seconds to 60 minutes. A user message of up to 20 characters can also be stored in the DLTT. This message can be used to identify a customer's location or identify a particular logger for tracking purposes. Use the example below to set a DLTT logger.


1. Plug the PC interface cable DLS into the printer port of the computer being used to set the DLTT. Plug the DLTT being set to the cable from the PC interface. The temperature probes do not have to be plugged in for this operation.
2. Start the Data Logger program. If you are using Windows™95(98), click on **Start**, click on **Programs**, click on **Supcolog**, click on **SUPCOLOG**.
3. If you are using Windows™3.11, double-click on the window labeled **Supcolog**, then double-click on the **SUPCOLOG** icon.

4. The program will open with a blank window showing no text or graph. On the toolbar located along the top of the screen, click on the **Setting Data Logger before recording** button.

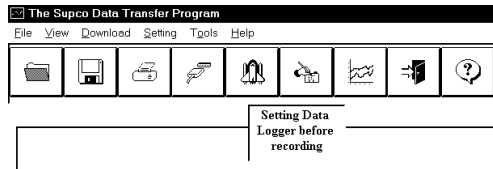


This will open a secondary window **Setting Data Logger**.

5. If a user message is desired, click in the **User Information** field and add the desired message. Note that the last message entered will be displayed and will remain until it is erased or changed by the user.

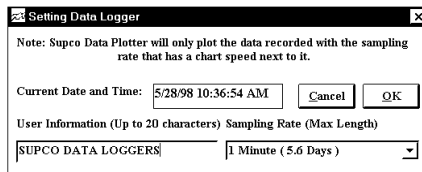

6. To select the sampling rate click on the down arrow in the **Sampling Rate** box. This will open a drop-down menu with the sampling rate selections. The time shown in parenthesis is the maximum recording length. Note that sampling rates that correspond to charts used by the SUPCO data plotter, will display a chart length rather than a maximum recording time, and will show a colored background in the Sampling Rate window.

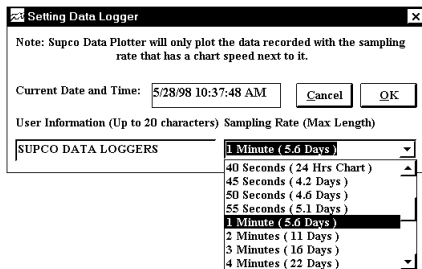

7. Click on the desired sampling rate. You may need to use the up or down arrows on the drop down menu to see more of the available recording intervals.


8. The time and date the logger is set to will be the same time as the PC clock. It is important to make sure the time set in the PC is correct. The PC time will be displayed as the **Current Date and Time** in the setting window.

Refer to the owner's manual for your computer to find instructions on setting the PC time if it is not correct.

9. When all of the settings for the DLTT are to your satisfaction, click on OK to store the setting in the DLTT and to close the window.
10. The DLTT is now set and ready to begin a new recording. Disconnect the DLTT from the PC interface and, if necessary, connect the temperature probes.
11. You can now connect a different DLTT or exit the program. To exit the program click on the **Exit** button on the tool bar.

TO START A RECORDING

To begin a new recording slide the access door closed. The LED indicator will begin to flash for 10 seconds. During this period the recording can be canceled without losing the data previously recorded. When the LED indicator stops flashing, a new recording has begun and any previous data has been erased. The DLTT recording function can be "locked" on by passing a Ty-Wrap™ or similar restriction through the logger-mounting opening. This can be used to prevent accidental or intentional disruptions of a temperature recording.

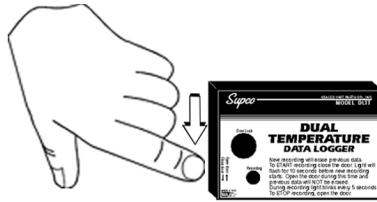

START Recording / Slide Door DOWN

The LED will flash every 5 seconds to indicate operation. A bright flash of the LED is used to indicate that each temperature probe has been sampled and recorded. A dim flash is used to indicate the DLTT is operating properly and no temperature information has not been sampled or recorded. The LED indicator will continue to flash until the user stops the recording, or the memory has reached its maximum capacity of 8,000 dual temperature samples.

NOTE: If the battery is exhausted during a recording the DLTT will automatically terminate the recording and save any temperature data recorded up to that point. The LED will stop flashing and the DLTT will not allow a new re-

ording to be started until the battery has been replaced. Recorded data can be retrieved regardless of the condition of the battery.

TO STOP A TEMPERATURE RECORDING


Slide the access door open (If locked, first remove the restriction device). The LED indicator will stop flashing. The recorded temperature information can be retrieved using the supplied Windows™ compatible software and PC interface, or the temperature recording



can be plotted on a circular chart using the optional SUPCO Data Plotter. **NOTE: Do not close the door until a new recording is desired!** It is important to leave the door open until you want to start a new recording. Starting a new recording now will erase any previous recording. To prevent accidental erasing of recordings the sliding access door of the DLTT can be “locked” open by passing a Ty-Wrap™ or similar restriction through the lock opening. The temperature recording will remain in the DLTT until a new recording is started. The recordings may be retrieved as many times as required or the battery can be removed with no effect on the stored data.


RETRIEVING TEMPERATURE RECORDINGS

1. Plug the PC interface into the printer port of the computer being used to retrieve the DLTT recording. Plug the DLTT being read to the cable from the PC interface. Start the Data Logger program.
2. If you are using Windows™95(98), click on **Start**, click on **Programs**, click on **Supcolog**, click on **SUPCOLOG**.
3. If you are using Windows™3.1, double-click on the window labeled **Supcolog**, then double-click on the **SUPCOLOG** icon.
4. The program will open with a blank window showing no text or graph. Connect the DLTT now if it is not already connected. On the toolbar located along the top of the screen click on the

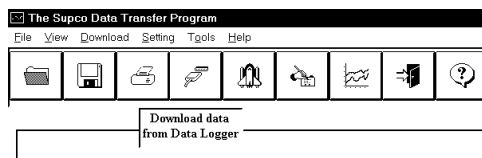


Download data from Data Logger button. A **Data Transfer** window will open.

- This window will allow you to select the temperature information in Celsius or Fahrenheit. Click on the desired scale, °F or °C.

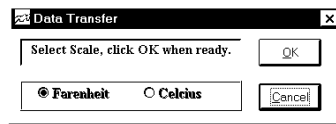


- Click on **OK**. The program will begin to retrieve the recording. A status bar along the top of the window will show the progress of information being retrieved.




- When the information has been retrieved, the program will automatically display the recording in the mode most recently used.

VIEWING A RECORDING AS A GRAPH

- When information is retrieved or when a file is opened it will automatically be displayed in the most recently used mode. To view a recording as a graph select the graph option in the Display Format box. The program will display the entire recording as an auto-scaled graph with the temperatures on the vertical scale and the time on the horizontal scale.




- To zoom to a particular part of the graph place the mouse cursor in a corner of an imaginary box that will enclose the area of interest.

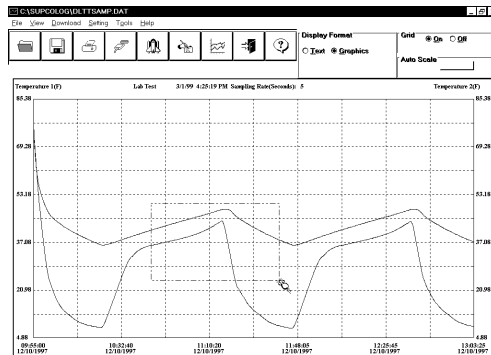


- Press and hold the left mouse button and move the cursor in a diagonal direction from the original position of the cursor. A dashed line forming a box will be displayed.
- Move the cursor until the box encloses the area of interest and release the left mouse button.
- The box will now be stationary on the screen. Move the mouse cursor so that it is inside the box and click the left mouse button.

6. The enclosed area of the box will now be zoomed so that it fills the entire window. This may be repeated if additional magnification of an area of the graph is desired.


7. To return to the original graph with no auto-scaling click on the **Full Graph** button.

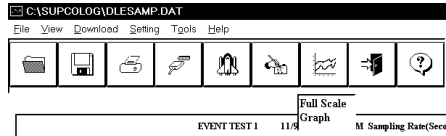


8. To auto-scale the graph click on the Auto Scale button. The graph will be automatically readjusted to fill the vertical axis of the screen.



9. The graph on the screen may be printed at any time by clicking on the **Print** button. Note that the printout will be what is displayed on the screen when the button is clicked.

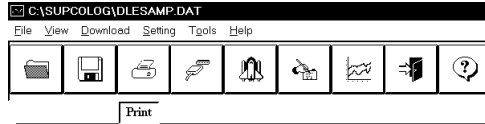


10. A window will open in the middle of the screen. You can select to print one or both of the temperature channels by selecting each box. When you have selected which items to print click **OK**, or click **Cancel** if you change your mind.


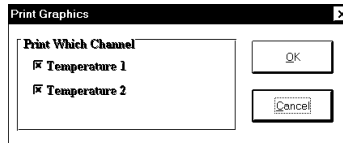


VIEW A RECORDING AS TEXT


1. When information is retrieved or when a file is opened it will automatically be displayed in the most recently used mode.
2. To view a recording as text when a graph is on the screen click the **Text** button located in the display box.
3. Use the Windows™ scroll bar on the right hand side of the screen to scroll through the text information.



4. To print the text information as text data click on the **Print** Button. A window will open in the middle of the screen. In the lower left of the window will be a drop-down menu which will allow you to select the number of degrees that each temperature has to change before the new value is printed. This feature will prevent needless printing of the temperature information when no temperature change has occurred. If you wish to print all the recorded information, leave this value at zero. Typically only one temperature channel will be used as a filter. It is possible, however, to filter both temperature channels independently of each other to provide maximum flexibility for this filter function.

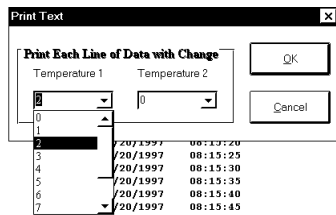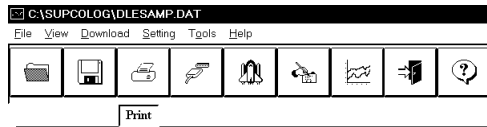

5. When you have selected the amount of temperature change to print (if any), click on the **OK** button to start printing.

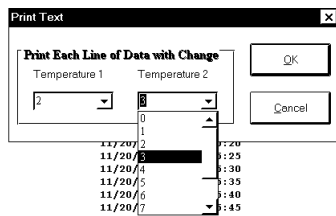

DATA LOGGER CALIBRATION

You can calibrate the DLTT data logger to make its reading match an external reference or standard. Set the DLTT sampling rate long enough to allow the logger's temperature probes to stabilize at the reference temperature and make a recording along with an external reference in a controlled environment such as a temperature chamber.

The calibration routine will use the second recording sample of each temperature probe to make the logger reading match with the external reference. Click Tools on the menu and click Calibrate Logger. A calibration password window will open. Type your password in the Current Password section. If you want to have

a new password next time, you can type a new password in the New Password section. Click the OK button when finished. If this is the first time you are calibrating the DLTT, no password is needed. You can click the OK button or press the Enter key to continue. If you have typed a password before and you don't want password protection for the calibration function, you can input None as the new password and this will clear the password protection.

After you type the correct current password and click OK, a calibration window will open. You can click the plus or minus button to make the data logger reading match with the reference reading that you recorded at the same time and same place with the DLTT. Click the OK button and the software will make a new data retrieval based on your new calibration setting. The new calibration setting will be saved in the DLTT and apply to all future recordings.

BATTERY INSTALLATION AND REPLACEMENT

The Supco Data Loggers use a 9-volt Alkaline battery (not supplied), which will have an average life of 1 year. The actual life of the battery will depend on a variety of factors such as the temperature the battery is used in, the sampling rate of the logger, and how often the Data logger is used. Extreme temperatures will result in reduced battery life. If the battery is exhausted during a recording, the Data Logger will automatically terminate the recording and save any data recorded up to that point. The LED will stop flashing and the Data Logger will not allow a new recording to be started until the battery has been replaced. Recorded data can be retrieved regardless of the condition of the battery.

When the logger will not be used for an extended period, or when the battery is exhausted, it is strongly recommended to remove the battery to avoid damage to the logger from battery leakage. **Use only Alkaline batteries.**

Substitution of a different battery can result in reduced performance or permanent damage to this instrument.

To install or replace the Data Logger's battery follow the steps below:

1. Make sure the logger is not set in the recording position. If so, slide the door open. Any information recorded up to this point will not be lost and is automatically saved.
2. Remove the rear battery cover.
3. The battery and battery clip may be extended from the battery compartment to facilitate replacement.
4. If you are replacing the battery remove the discharged battery from the battery clip and dispose of properly. **Allow at least one minute to elapse before attaching a new battery. Failure to do so will result in the logger not resetting properly and the logger will not function.**
5. Line up the connector of the new battery and push onto the pins of the battery clip with a firm fluid motion. It is important not to make repeated momentary contact, as this will cause a reset failure in the logger. **Do NOT reverse the battery connection, even momentarily, as this can result in loss of data or permanent damage to the logger.**
6. Place the battery in the battery compartment of the Data Logger.
7. Replace the battery cover.
8. Test the logger by closing the door and observing that the LED begins flashing within 5 seconds of the door being closed. If the LED does not flash or the LED stays on constantly go back to step 4 and repeat the replacement procedure.


Once the battery has been replaced it will be necessary to reset the logger's internal clock. Refer to the section **Setting the Data Logger** for instructions on how to do this.

PRODUCT SPECIFICATIONS

Operating Temperature Range (Logger)	+10°F to +140°F(-12°C to 60°C)
Operating Temperature Range (Sensors)	-40°F to +170°F(-40°C to 76°C)
Storage Temperature	-40°F to +170°F(-40°C to 76°C)
Time Accuracy	+/- 100ppm @ 75°F
Relative Humidity Range	0 to 95% Non-condensing
Remote Temperature Probe	Solid State sensor with 6 ft. long cable and 4" stainless steel submersible tip, probes (DLTP6) are field interchangeable
Temperature Accuracy	+/- 2°F (+/-1°C)
Temperature Resolution	0.1° F
Measurement Capacity	8000 Dual Temperature Data Samples
Size	2.5" x 3.6" x 1.1"
Weight	0.26 Lbs.
Power Source	9 Volt Alkaline Battery
Battery Life	1 year (avg.)
Software	SUPCO Datalog with 6 ft. connecting cable (DLCABLE) and Parallel Port Interface Software (DLDISK) Windows™ 95, 98, and NT Compatible.

DP3 DATA PLOTTER

The SUPCO DP3 is an optional accessory instrument that allows the user to retrieve data and program SUPCO data loggers in the field without the need of a computer. Using the DP3 you can plot recorded information from a data logger or change the settings of a data logger prior to making a different data recording. The DP3 can be operated from batteries or from the supplied AC adapter. The DP3 uses a series of structured menus to provide a user friendly intuitive style of operation. The DP3 also serves as a conventional temperature recorder similar to the popular SUPCO CR87 series of temperature recorders.

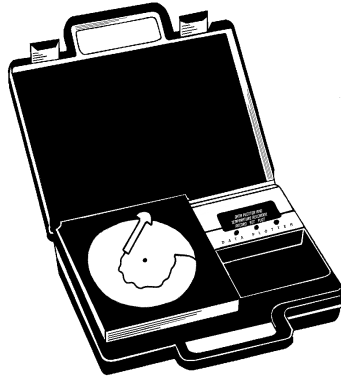

DATASTOR

The DataStor is a battery powered hand-held instrument that allows the user to retrieve and store recordings made with any of Supco's data loggers. The user can then transfer the stored recordings to a PC or print them on the spot to virtually any parallel printer without using a PC. The DataStor can save up to 31 full recordings from any of Supco's data loggers. Each recording is individually numbered and the user can transfer a single recording or all of the saved recordings to a PC using the software supplied with every data logger. An alphanumeric display and structured menu's provide easy intuitive operation.

